Technical Manual
Intermezzo 2.6p

ACOUSTIC & ELECTRICAL SPECIFICATIONS:

• Nominal Impedance	8Ω
• Max Amp Power	150 watts*
• Frequency Response	48Hz – 22kHz (±3dB) 59Hz – 20kHz (±1.5dB)
• Sensitivity	90dB (2.83 volts @ 1 meter)
• 2nd- and 3rd-Order Harmonic Distortion	<1% (40Hz – 20kHz @ 95dB SPL)
• Crossover Frequency	2000Hz, 24dB/Octave

SYSTEM COMPONENTS:

• Cabinet	Intermezzo 2.6p L/R (Not for Sale)
• Grille, Gray (R/L) (Pair)	335453-040
• Low-Frequency Transducer	6-1/2" (165mm) C.M.M.D.™, Neodymium, shielded 337563-001
DC Resistance	4.4 ohms ±10%
• High-Frequency Transducer	1" (25mm) C.M.M.D., Neodymium, shielded 335225-002
DC Resistance	3.4 ohms ±10%
• Crossover Network	337564-001

AURAL SWEEP TEST SPECIFICATIONS:

• System Aural Sweep Test	6.0V Input 40Hz to 22kHz
• L.F. Aural Sweep Test	5.0V Input 40Hz to 3kHz
• H.F. Aural Sweep Test	2.83V Input 2kHz to 22kHz

PHYSICAL SPECIFICATIONS:

• Enclosure Dimensions	15" x 9-3/4" x 11-1/2" (381mm x 248mm x 292mm)
• Weight	40 lb (16.4kg) Sold in pairs

WARRANTY:

• Refer to Warranty Statement packed with each product

* The maximum recommended amplifier power rating will ensure proper system headroom to allow for occasional peaks. We do not recommend sustained operation at these maximum power levels.

PACKAGING

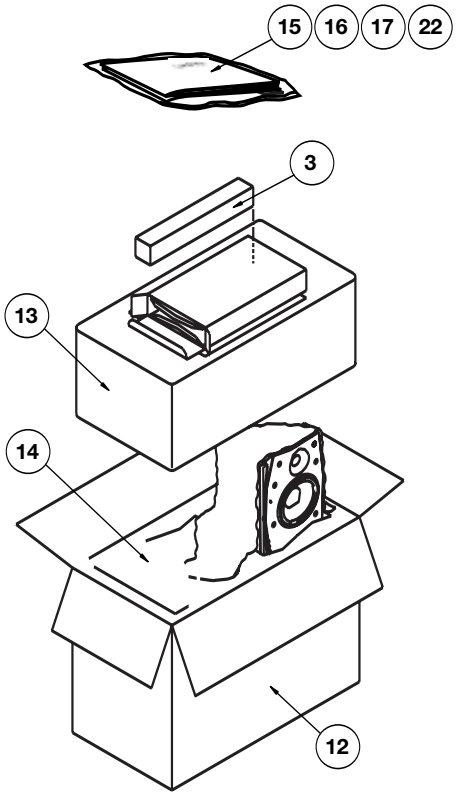

Optional Accessories:
Floor Stand, Part #FS-ITM/IL
Wall Bracket – OmniMount® Model 75 WB (Black or White)

Legend on Page 2

IM2.6p WIRING DIAGRAM

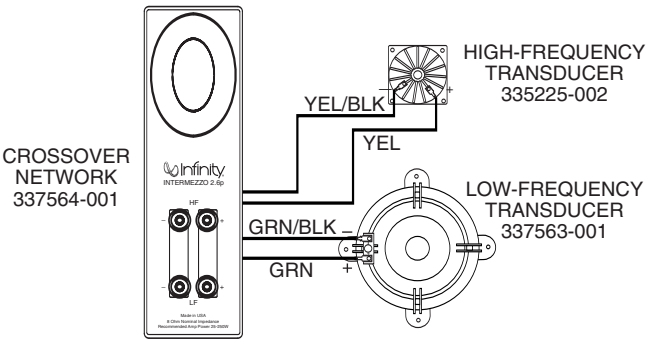

IM2.6p SCHEMATIC

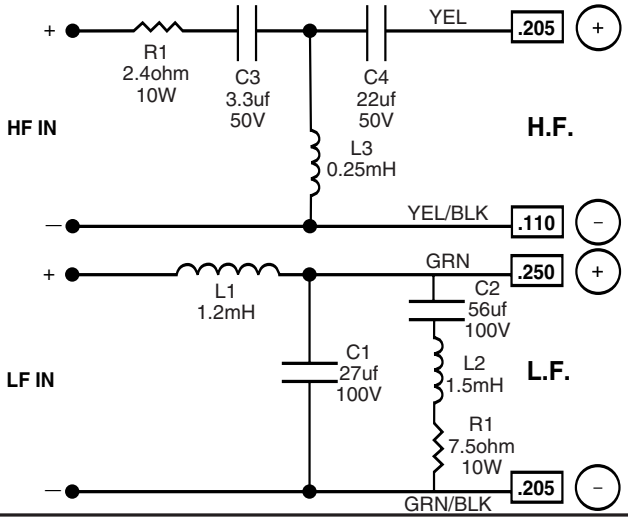

Intermezzo 2.6p

Technical Manual

Intermezzo 2.6p

EXPLODED VIEW

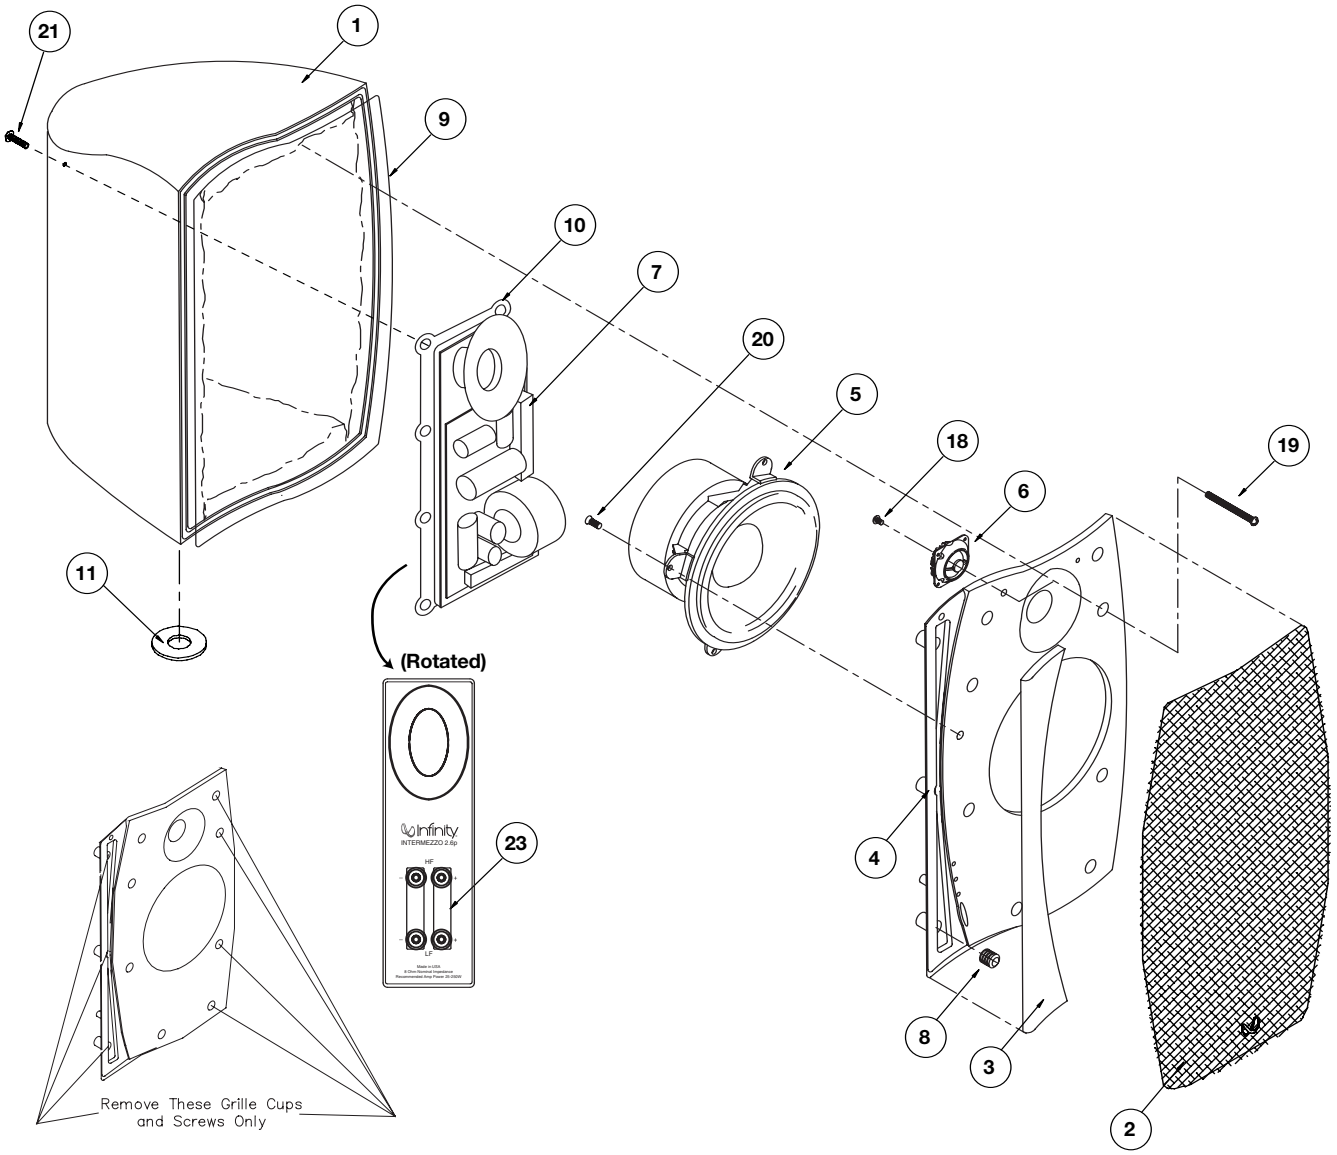

ITEM NO.	DESCRIPTION	QTY.	PART NO.
1.	Cabinet, Intermezzo 2.6p L/R	1	(Not for Sale)
2.	Grille (R/L) Gray	Pair	335453-040
3.	Side Trim Panels (R/L) Champagne	Pair	337481-001
4.	Front Baffle (R)	1	335277-003
	Front Baffle (L)	1	335277-004
5.	Low-Frequency Transducer, 6-1/2" (165mm)	1	337563-001
6.	High-Frequency Transducer, 1" (25mm)	1	335225-002
7.	Crossover Network	1	337564-001
8.	Grille Retainers	11	333249-003
9.	Faceplate Gasket (O-ring)	1	331106-001
10.	Rear X-Over Gasket	1	336209-001
11.	Rubber Feet	4	335459-001

ITEM NO.	DESCRIPTION	QTY.	PART NO.
12.	Outer Carton	1	337561-001
13.	Top Foam Pad	1	335737-001
14.	Bottom Foam Pad	1	335737-002
15.	Owner's Manual	1	337560-001
16.	Warranty Card	1	335841-001
17.	Survey Card	1	335868-002
18.	Screw (tweeter), PPH 6-32 x 3/8" ZNC	4	905401-006
19.	Screw (front baffle), PPH 8-32 x 2" ZNC	7	900202-036
20.	Screw (woofer), FPH 8-32 x .5 ZNC	4	901702-008
21.	Screw (network), PPH 6-19 x 3/8" ZNC	8	10811
22.	Screw Set, 1/4 x 20 x .5"	8	900501-008
23.	Shorting Straps	2	073-110023-000

TO SERVICE THE INTERMEZZO 2.6p

1. Remove the grille and side panel.
2. Extract (7) of the rubber grille retainers shown in the illustration; this can be accomplished by carefully pulling them out of their cavities with long-nosed pliers or a similar tool.
3. Remove the (7) Phillips screws that are now exposed.
4. Carefully lift the front baffle, with drivers, off the cabinet.
5. To access the crossover network, remove the (8) Phillips screws at the rear of the cabinet and push the network out the front of the loudspeaker.

Infinity Systems, Inc., 250 Crossways Park Drive, Woodbury, New York 11797

Rev 2 10/2004